



A*1


B*1

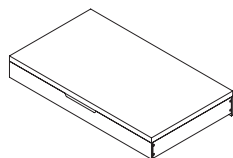

C*1

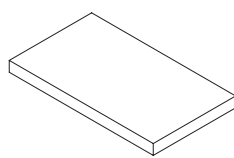

D*1

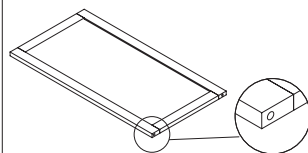

E*1

Note: this screw hole is more close to the edge than the other side.




JX2



MX4




②x4




N*2




O*4




P*1

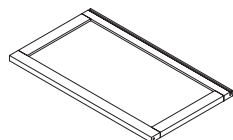

F*1



G*2

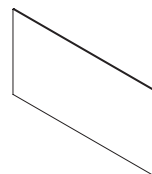

H*1



KX8




①x12






③x16






Instruction Manual HW1100

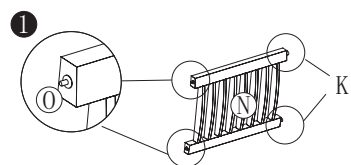

Insert the wooden pin(K) on one side of N and insert O on the other side, and install it on A/B

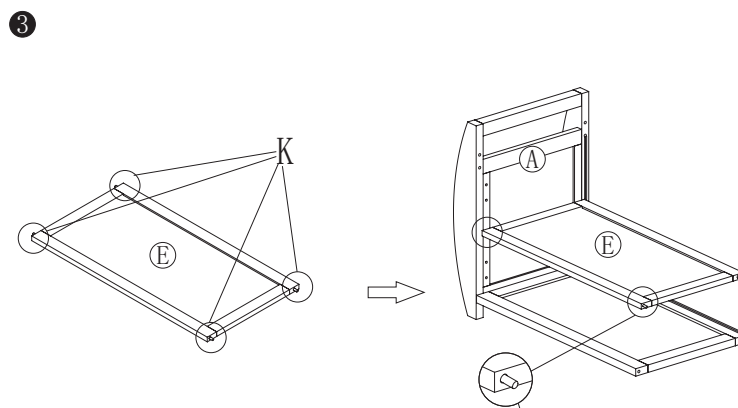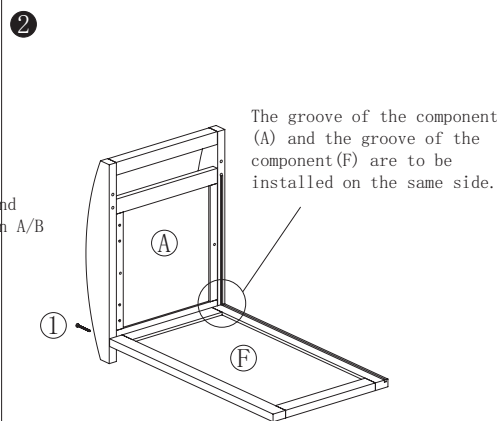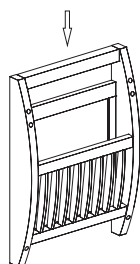

ATTENTION: The positions of the two holes are different, and the holes on one side are closer to the edge, and the side should be installed outside to prevent the door from closing.

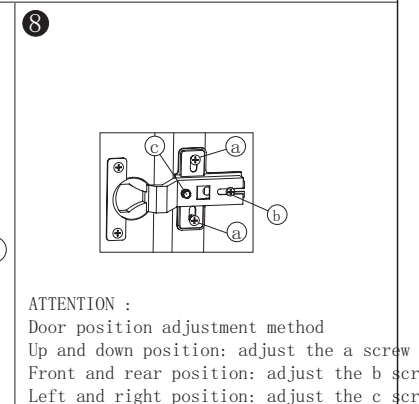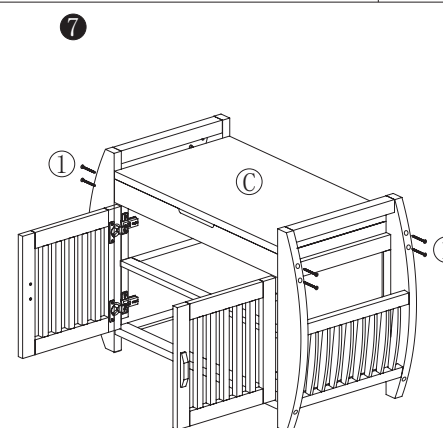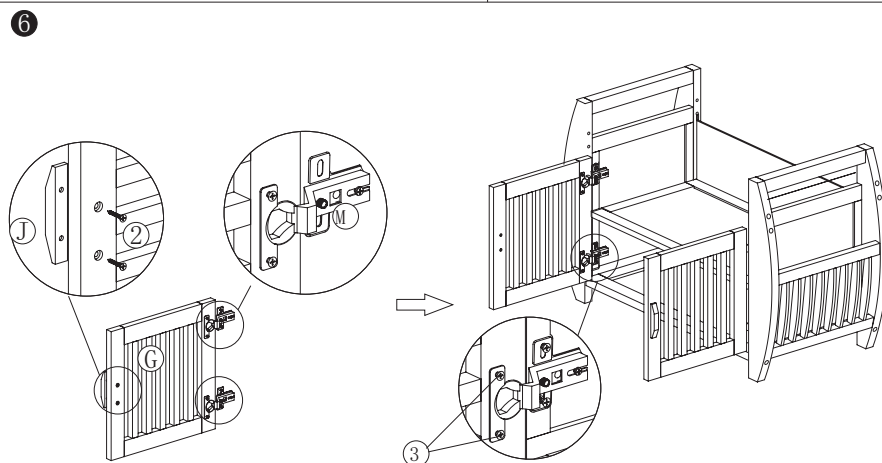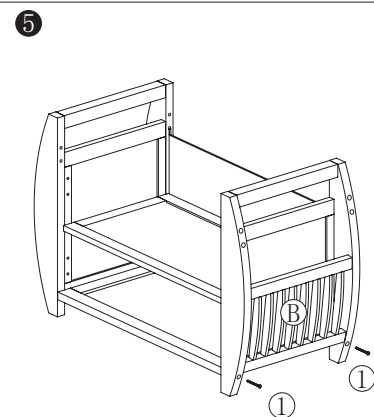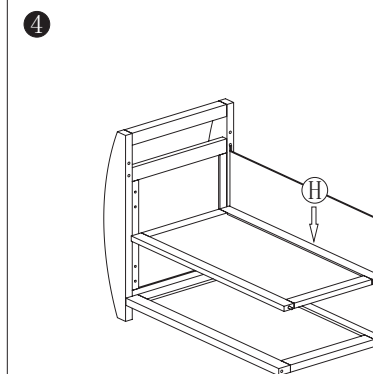

ATTENTION :
Door position adjustment method
Up and down position: adjust the a screw
Front and rear position: adjust the b screw
Left and right position: adjust the c screw